

# Ruijie Reyee RG-EST Series Wireless Bridges ReyeeOS 1.80.1305

## Web-based Configuration Guide



## Copyright

Copyright © 2022 Ruijie Networks

All rights are reserved in this document and this statement.

Any reproduction, excerpt, backup, modification, transmission, translation or commercial use of this document or any portion of this document, in any form or by any means, without the prior written consent of Ruijie Networks is prohibited.

Trademarks including  are owned by Ruijie Networks.

All other trademarks or registered trademarks mentioned in this document are owned by their respective owners.

## Disclaimer

The products, services, or features you purchase are subject to commercial contracts and terms. Some or all of the products, services or features described in this document may not be within the scope of your purchase or use. Unless otherwise agreed in the contract, Ruijie Networks does not make any express or implied statement or guarantee for the content of this document.

Due to product version upgrades or other reasons, the content of this document will be updated from time to time. Ruijie Networks reserves the right to modify the content of the document without any notice or prompt.

This manual is for reference only. Ruijie Networks endeavors to ensure content accuracy and will not shoulder any responsibility for losses and damages caused due to content omissions, inaccuracies or errors.

# Preface

## Intended Audience

This document is intended for:

- Network engineers
- Technical support and servicing engineers
- Network administrators

## Technical Support

- The official website of Ruijie Reeye: <https://www.ruijienetworks.com/>

## Conventions

### 1. GUI Symbols

Interface symbol	Description	Example
<b>Boldface</b>	1. Button names 2. Window names, tab name, field name and menu items 3. Link	1. Click <b>OK</b> . 2. Select <b>Config Wizard</b> . 3. Click the <b>Download File</b> link.
>	Multi-level menus items	Select <b>System &gt; Time</b> .

### 2. Signs

The signs used in this document are described as follows:

#### **Danger**

An alert that calls attention to safety operation instructions that if not understood or followed when operating the device can result in physical injury.

---

#### **Warning**

An alert that calls attention to important rules and information that if not understood or followed can result in data loss or equipment damage.

---

#### **Caution**

An alert that calls attention to essential information that if not understood or followed can result in function failure or performance degradation.

---

#### **Note**

An alert that contains additional or supplementary information that if not understood or followed will not lead to serious consequences.

---

---

 **Specification**

An alert that contains a description of product or version support.

---

**3. Note**

This manual introduces the features of the product and offers guidance on configuration and testing.

# 1 Login

## 1.1 Configuration Environment Requirements

- Google Chrome, Internet Explorer 9.0, 10.0, and 11.0, and some Chromium/Internet Explorer kernel-based browsers (such as 360 Extreme Explorer) are supported. Exceptions such as garble or format error may occur if an unsupported browser is used.

## 1.2 Default Configuration

Table 1-1 Default Web Configuration

Item	Default Value
IP address	10.44.77.254
Username/Password	Username and password are not required at your first login and you can configure the bridge directly.

## 1.3 Login to Eweb on a PC

### 1.3.1 Connecting to the Device

You can open the management page and complete the bridge configuration only after connecting a PC to the bridge. You can connect a PC to the bridge in either of the following ways.

- Wired Connection

Connect a local area network (LAN) port of the bridge to the network port of the PC, and set the IP address of the PC. See [Configuring the IP Address of the Management Computer](#).



---

**Note**

Only EST350v1 and EST350v2 have two LAN ports.

---

- **Wireless Connection**

On a mobile phone or laptop, search for wireless network **@Ruijie-bXXXX**. (XXXX is the last four digits of the MAC address of each device, and the MAC address can be found at the rear side of each bridge.) In this mode, you do not need to set the IP address of the management computer, and you can skip the operation in [Configuring the IP Address of the Management Computer](#).

### 1.3.2 Configuring the IP Address of the Management Computer

Configure an IP address for the management computer in the same network segment as the default IP address of the device (The default device IP address is 10.44.77.254, and the subnet mask is 255.255.255.0.) so that the management computer can access the device. For example, set the IP address of the management computer to 10.44.77.10.

---

**Caution**

The IP address of the management computer cannot be set to 10.44.77.253, because this IP address is reserved by the device. If the management computer uses this IP address, it cannot access the device.

---

### 1.3.3 Logging in to the Web Page


- (1) Enter the IP address (10.44.77.254 by default) of the bridge in the address bar of the browser to open the login page.
- 

**Note**

If the static IP address of the device is changed, or the device obtains a new dynamic IP address, the new IP address can be used to access the web management system of the device as long as the management computer and the device are in the same network segment of a LAN.

---

- (2) On the web page, enter the password and click **Login** to enter the web management system.

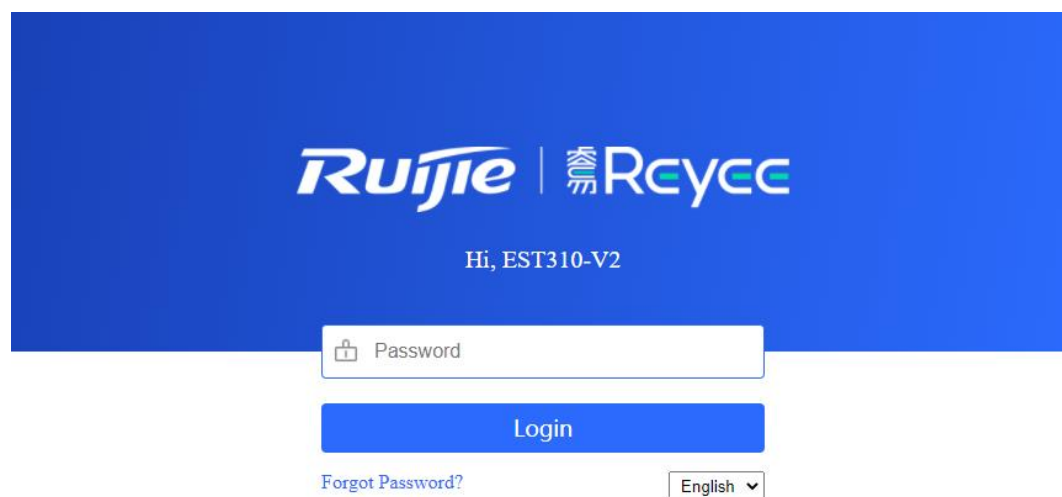

Username and password are not required at your first login and you can configure the bridge directly.

For device security, you are advised to set the management password after your first login to the web management system. After the password is set, you need to enter the password when you log in to the web management system again.

If you forget the IP address or password, hold down the **Reset** button on the device panel for more than 5 seconds when the device is connected to the power supply to restore factory settings. After restoration, you can use the default IP address and password to log in.

---

**⚠ Caution**

Restoring factory settings will delete the existing configuration and you are required to configure the device again at your next login. Therefore, exercise caution when performing this operation.

---

## 2 Wi-Fi Network Settings

### 2.1 Overview

#### 2.1.1 NVR and Camera

Bridges purchased in pairs in the same package can be paired automatically with each other after power-on. You can also manually pair the devices by setting up a WDS network. See [Setting WDS Wi-Fi for a Single NVR or Camera](#). In a paired WDS group, bridges can work in access point (AP) or Customer Premises Equipment (CPE) mode.

- **NVR end (AP):** A bridge sending bridging signals is generally connected to the NVR end in a surveillance room. A WDS group can contain at most one AP.
- **Camera end (CPE):** A bridge that enables customers to access ISP's communication services is generally connected to the camera end. A WDS group can contain multiple CPE.

 
#### 2.1.2 WDS Wi-Fi and Management Wi-Fi

- **WDS Wi-Fi:** An AP broadcasts the WDS Wi-Fi signal. A CPE accesses the WDS Wi-Fi and upload videos or other data to the AP.
- **Management Wi-Fi:** Both an AP and a CPE can broadcast management Wi-Fi signal. You can use a mobile phone or laptop to access the management Wi-Fi and log in to the web page to configure bridges.

### 2.2 Switching NVR and Camera Mode

If an NVR fails, replace it and switch the new device to NVR (AP). If multiple cameras (CPE) are required, a device newly joining the WDS group needs to be switched to Camera (CPE).

- (1) You can check the current mode in the upper right corner of the web page and click **Pair Again** to switch the mode.



(2) In the displayed dialog box, click **Start**.

**Note** ×

**ⓘ** You can reset the device to restore default pairing status.

**Country/Region:** ✳

**Pairing Status:** Default

**Work Mode:** Camera (CPE)

**WDS SSID:** @Ruijie-wds-0808

**Custom:**

1. Support one-to-many (one AP to many CPEs).
2. Replace the paired device.

**Start**

(3) Click **Next**.

**Country/Region** ×

The country/region you select here must be the same as the country/region of the WDS network.

Country/Region:

(4) Select a mode from the **Work Mode** drop-down list.

---

**⚠ Caution**

Switching the mode will reboot the device. Therefore, exercise caution when performing this operation.

---

**Mode Switchover** ×

Work Mode:


NVR (AP)

**Camera (CPE)**




## 2.3 Configuring the WDS Password for All Bridges in the LAN

Choose **Overview > WDS Password**.

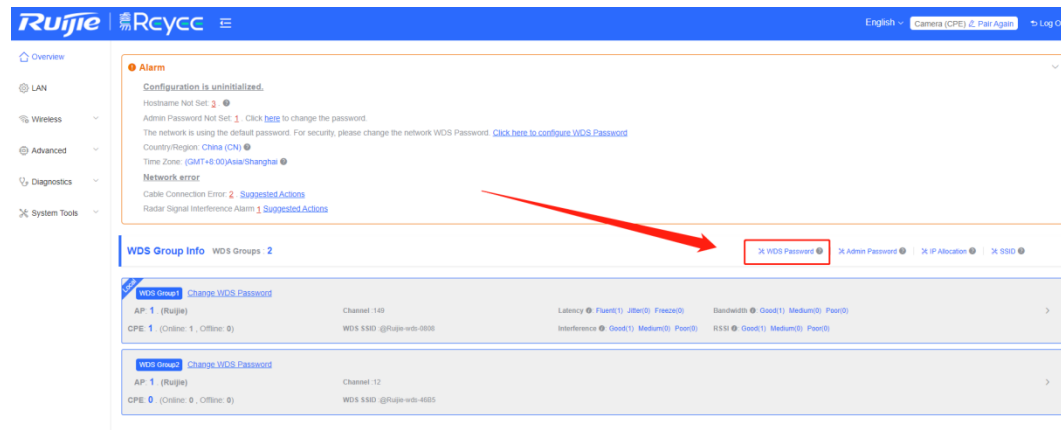

The screenshot shows the Ruijie Rcycc web interface. The top navigation bar includes 'Overview', 'LAN', 'Wireless', 'Advanced', 'Diagnostics', and 'System Tools'. The 'WDS Password' tab is highlighted in the top navigation bar. The main content area displays an 'Alarm' section with several messages, including 'Configuration is uninitialized.', 'Admin Password Not Set', and 'Network error'. Below the alarm section, there is a 'WDS Group Info' section with two groups. The first group is 'WDS Group 1' with AP 1 (Ruijie) and Channel 140. The second group is 'WDS Group 2' with AP 1 (Ruijie) and Channel 12. The 'WDS Password' tab is highlighted in the top navigation bar.

 

Click **WDS Password**, enter the password in the displayed dialog box, and click **Save**.

Hover the cursor over  to view the help information.

### WDS Password ✕

\* Password

\* Confirm Password

### Caution


When configuring the WDS password for the entire network, ensure that all devices in the network are online. Otherwise, the WDS passwords of the devices will be inconsistent.

Configuring the WDS password for the entire network will reconnect all devices in the network. Therefore, exercise caution when performing this operation.

If there is an unbridged device in the network, the WDS password cannot be configured.

## 2.4 Configuring the Management SSID and Password for All Bridges in the LAN

Choose **Overview > SSID**.

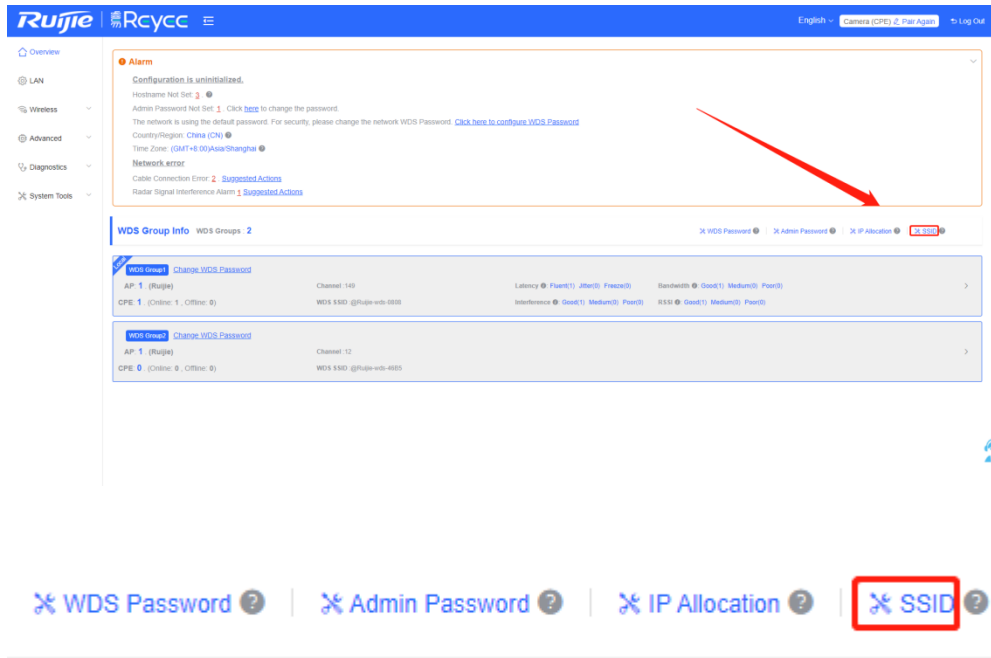

**Note**

The management Wi-Fi network is used only for login to the web page and device management, and cannot be used for Internet access. It is isolated from the service network.

The default device management service set identifier (SSID) is **@Ruijie-bXXXX**. (XXXX is the last four digits of the MAC address of each device, and the default management SSID varies with device.) Click **SSID** on the page to set the same management SSID and password for all bridges in the LAN.

**Enable WiFi:** Choose whether to enable the management Wi-Fi for all devices in the network.

**SSID:** The SSID is the name of the management Wi-Fi network.

**Security:** The following encryption types are available: Open, WPA-PSK, WPA2-PSK, and WPA\_WPA2-PSK. You are advised to choose WPA\_WPA2-PSK and set the password to improve the security.

**Hide SSID:** When this function is enabled, mobile phones or computers cannot find the Wi-Fi name, and users need to manually enter the correct name and password. This can prevent Wi-Fi from being accessed by unauthorized users and can enhance security.

### SSID Settings



Enable WiFi

\* SSID: @Ruijie-b6766

Security: WPA\_WPA2-PSK

\* Password: Password:

Hide SSID:  (The SSID must be manually entered exactly.)

Save

#### Caution

After the configuration is saved, NVRs and cameras in the network will be reconnected. Therefore, exercise caution when performing this operation.

## 2.5 Configuring the WDS Password for All Bridges in the WDS Group

Choose **Overview > Change WDS Password**.

The default WDS password of devices is the same. Changing the WDS password can prevent others from illegally accessing the user network by using a device of the same model.

When configuring the WDS password for bridges in the entire network is unavailable or unnecessary, you can click **Change WDS Password** to configure the WDS password for bridges in the WDS group. If there is an unbridged device in the group, the **Change WDS Password** function will be unavailable.

The screenshot shows the Ruijie Rcycc web interface. At the top, there is a navigation bar with the Ruijie logo, 'Rcycc', and a language dropdown set to 'English'. Below the navigation bar is a sidebar menu with options: Overview, LAN, Wireless, Advanced, Diagnostics, and System Tools. The main content area displays an 'Alarm' section with several messages, including 'Configuration is uninitialized', 'Hostname Not Set', and 'Network error'. Below the alarm section is the 'WDS Group Info' section, which shows two WDS groups. The first group, 'WDS Group 1', has a 'Change WDS Password' button highlighted with a red box and a red arrow pointing to it. The second group, 'WDS Group 2', also has a 'Change WDS Password' button. The interface also shows various status indicators and links for each group.

## WDS Group Info WDS Groups : 2

**Local**

**WDS Group1** [Change WDS Password](#)

AP: 1 . (Ruijie) Channel :149

CPE: 1 . (Online: 1 , Offline: 0) WDS SSID :@Ruijie-wds-0808

---

### Caution

When configuring the WDS password for a WDS group, ensure that all devices in the group are online. Otherwise, WDS passwords of the devices will be inconsistent.

Configuring the WDS password for a WDS group will reconnect devices in the group. Therefore, exercise caution when performing this operation.

If there is an unbridged device in the WDS group, this function will be unavailable.

---

## 2.6 Setting WDS Wi-Fi for a Single NVR or Camera

### 2.6.1 Setting the WDS SSID

To prevent network exceptions, you are advised to keep the default WDS SSID unless otherwise specified.

If a new WDS SSID is set for a device in a WDS group, other bridges in the group need to change to the new SSID as well to connect with this device.

When a new device is connected, you can either configure a new WDS SSID or click **Scan** to select a target WDS SSID.

To check the WDS SSIDs of WDS groups, choose **Overview > WDS Group Info**. For details, see [Displaying WDS Group Information](#).

---

### Caution

- Configuring a WDS SSID will disconnect the WDS link. Incorrect WDS SSID will cause a WDS connection failure. Therefore, exercise caution when performing this operation.
-

**WDS**

\* WDS SSID

WDS Password  Default Password

.....

## 2.6.2 Configuring the WDS Password

A correct WDS password is required for a successful WDS link. To prevent unauthorized devices from connecting to the WDS Wi-Fi network, high-security passwords are used for devices by default, and the password for devices of the same model is the same. You are advised to change the password for devices in the entire network or in a WDS group to prevent others from accessing the network using a device of the same model.

**WDS**

\* WDS SSID

WDS Password  Default Password

---

### Caution

- WDS passwords can be configured only for cameras, and not for NVRs.
  - Configuring a WDS password will disconnect the WDS link. An incorrect WDS password will cause a WDS connection failure. Therefore, exercise caution when performing this operation.
- 

## 2.6.3 Saving the Settings

After changing the WDS SSID or password, click **Save** to activate settings at once.

---

## 2.7 Optimizing Wireless Network

### 2.7.1 Overview

The device detects the surrounding wireless environment and selects the appropriate configuration upon power-on. However, network stalling caused by wireless environment changes cannot be avoided. You can also analyze the wireless environment around the bridge and manually select appropriate parameters.

### 2.7.2 Getting Started

Before configuration, you can check the interference in the current environment in the following way to find the optimal channel.

Choose **Wireless > WDS > Channel & Transmit Power**.

Click **Interference** to check the interference of current channels. The channel with the smallest interference is the optimum.

The screenshot displays the configuration page for 'Channel & Transmit Power'. At the top, there is a text input field containing 'Ruijie123' and a 'Save' button. Below this, the 'Channel & Transmit Power' section is visible, featuring several dropdown menus: '5G Channel' (set to 'Auto'), 'Channel Width' (set to 'Auto'), 'Transmit Power' (set to 'Auto'), and 'Distance' (set to '1 KM'). A red box highlights the 'Interference' button next to the '5G Channel' dropdown. A red note below the dropdowns states: 'In CPE mode, the local channel and channel width'. To the right, a bar chart titled 'Analysis (Current Channel: auto)' shows RFI Strength for various channels. The chart indicates that channel 36 has the highest RFI strength (around 1100) and channel 161 has the lowest (around 10).

Channel	RFI Count
36	56
40	31
44	12
48	5
52	0
56	2
60	0
64	2
149	0
153	0
157	1
161	0

### 2.7.3 Configuration Steps


#### 1. Optimizing the Radio Channel

##### (1) Channel settings

Choose **Wireless > WDS > Channel & Transmit Power > 5G Channel**.

The default channel is **Auto**, indicating automatic channel adaption based on the surrounding environment upon power-on. Choose the optimal channel identified through the above analysis. Click **Save** to activate settings immediately. Excess STAs connected to a channel can bring stronger wireless interference.

### Channel & Transmit Power

5G Channel   Interference


Channel Width

Transmit Power

Distance

The camera mode does not support independent channel settings. After the channel at the NVR end is adjusted, the camera end automatically changes its channel to be the same as the NVR end.

### Channel & Transmit Power

5G Channel   Interference

Channel Width

*In CPE mode, the local channel and channel width are consistent with the peer channel and channel width.*

Transmit Power

Distance

**Note**

The available channel is related to the country/region code. Select the local country or region. The above figure provides guidance on 5 GHz channel configuration. Take the same steps for 2.4 GHz channel configuration. The single-radio (2.4 GHz) device does not support 5 GHz configuration.

**Caution**

After the channel is changed, the NVR will be reconnected to the camera. Therefore, exercise caution when performing this operation.

(2) One-click optimization


Choose **Wireless > WDS > Optimize WDS**.

Click **Optimize WDS** so that the device automatically selects the channel again based on the interference in the current environment, ensuring that the device works in the optimal channel. You are advised to optimize WDS when the original channel is not the optimum.

## Optimize WDS

A blue rectangular button with rounded corners containing the text "Optimize WDS" in white.

---

 **Caution**

After you click **Optimize WDS**, the NVR will be reconnected to the camera. Therefore, exercise caution when performing this operation.


---

## 2. Optimizing the Channel Width

Choose **Wireless > WDS > Channel & Transmit Power > Channel Width**.

If the interference is severe, choose a lower channel width to avoid network stalling. A 5 GHz bridge supports channel widths of 20 MHz, 40 MHz, and 80 MHz, while a 2.4 GHz bridge supports channel widths of 20 MHz and 40 MHz. The network is stable when the channel width is smaller. A larger channel width is more susceptible to interference. The default channel width of a 2.4 GHz bridge is 20 MHz (recommended configuration). The default channel width of a 5 GHz bridge is 40 MHz (recommended configuration). After changing the channel width, click **Save** to activate settings immediately.

---

 **Caution**

After the channel width is changed, the NVR will be reconnected to the camera. Therefore, exercise caution when performing this operation.

---



### Channel & Transmit Power

5G Channel  Interference

Channel Width

Transmit Power

Distance

### 3. Optimizing the Transmit Power

Choose **Wireless > WDS > Channel & Transmit Power > Transmit Power**.

Greater transmit power indicates larger coverage and brings stronger interference to surrounding wireless devices. The default value is **Auto**, indicating automatic adjustment of the transmit power. In a scenario in which wireless devices are installed densely, a lower power is recommended. **Low**, **Medium**, and **High** indicate 50%, 75%, and 100% power, respectively.

### Channel & Transmit Power

5G Channel  Interference

Channel Width

Transmit Power

Distance

### 4. Configuring the Distance

Choose **Wireless > WDS > Channel & Transmit Power > Distance**.

It is recommended that the configured distance between the NVR and camera be greater than their actual distance. If the configured distance is much smaller than the actual distance, the wireless performance will deteriorate, and WDS connection may fail.

### Channel & Transmit Power

5G Channel  📊 Interference

Channel Width

Transmit Power

Distance

**Save**


**Note**

EST310v1 and EST310v2 supports a distance of 1-3 km, while EST350v1 and EST350v2 support a distance of 1-8 km. The default distance of EST310v1 and EST310v2 is 1 km, while that of EST350v1 and EST350v2 is 6 km.

## 2.8 Changing the Country/Region Code

### 2.8.1 Getting Started

Country/region code change takes effect on all devices in the entire network, that is, all bridges on the **Overview** page. Therefore, before changing the country/region code, confirm that the target device is in the current network and the WDS link works well.

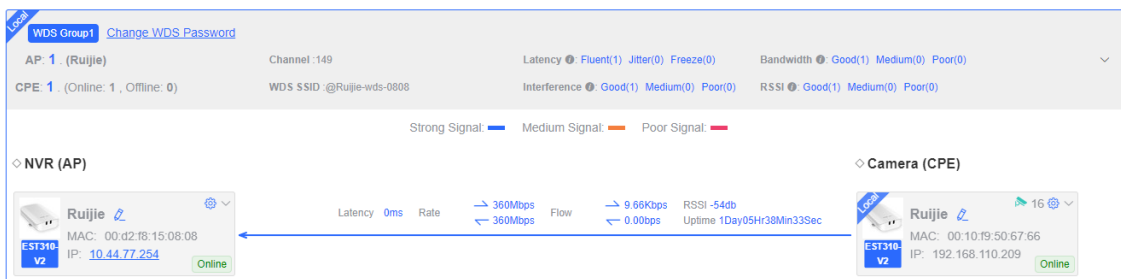

### 2.8.2 Configuration Steps

Choose **Wireless > Country/Region > Country/Region**.

Choose the target country/region from the drop-down list, and click **Save**.

## Country/Region

Country/Region United States (US) ▾

**Save**


### ⚠ Caution

After the country/region code is changed, the Wi-Fi network will restart, and the NVR and the camera will be reconnected after the Wi-Fi network is restarted.

The current channel may be switched to **Auto** because it is not supported by the country/region. Therefore, exercise caution when performing this operation.

## 2.9 Displaying WDS Group Information


Choose Overview > WDS Group Info.

Displayed WDS group information includes the number of APs and CPEs in the group, current working channel, SSID, latency, interference, wireless bandwidth and quality, RSSI and quality, data rate, real-time traffic, and uptime. Hover the cursor over  to view the detailed information of every item.

The screenshot shows the 'WDS Group Info' page for 'WDS Groups - 1'. It displays details for 'WDS Group1' including AP: 1 (Ruijie), Channel: 149, and CPE: 1 (Online: 1, Offline: 0). A legend indicates signal strength: Strong Signal (blue), Medium Signal (orange), and Poor Signal (red). Two devices are shown: an NVR (AP) and a Camera (CPE), both Ruijie EST310 V2. The NVR has MAC 00:d2:f8:15:08:08 and IP 10.44.77.254. The Camera has MAC 00:10:f9:50:67:66 and IP 192.168.110.209. A blue arrow points from the Camera's latency field to a tooltip.

The tooltip displays the following information:

Hostname	MAC	Latency
Ruijie	00:10:f9:50:67:66	0ms

Below the tooltip, the latency field 'Latency:  Fluent(1) Jitter(0) Freeze(0)' is visible, with the info icon highlighted by a red box.


### Note



AP is at the NVR end, while CPE is at the camera end.

## 2.10 Displaying the Information About a Single Device

- Choose **Overview > WDS Group Info > NVR (AP)/Camera (CPE)**.



Click the  icon of a device to display the basic information about the device in the right panel of the page, including the hostname, uptime, online status, model, SN, MAC address, software and hardware versions, IP address, subnet mask, LAN port status, noise floor/utilization, distance, channel, transmit power, channel width, RSSI, and band.

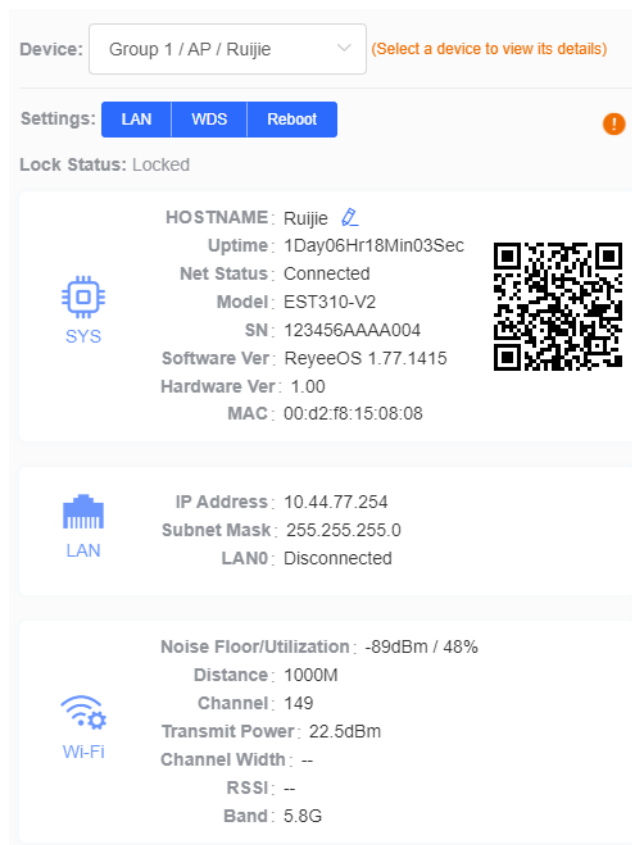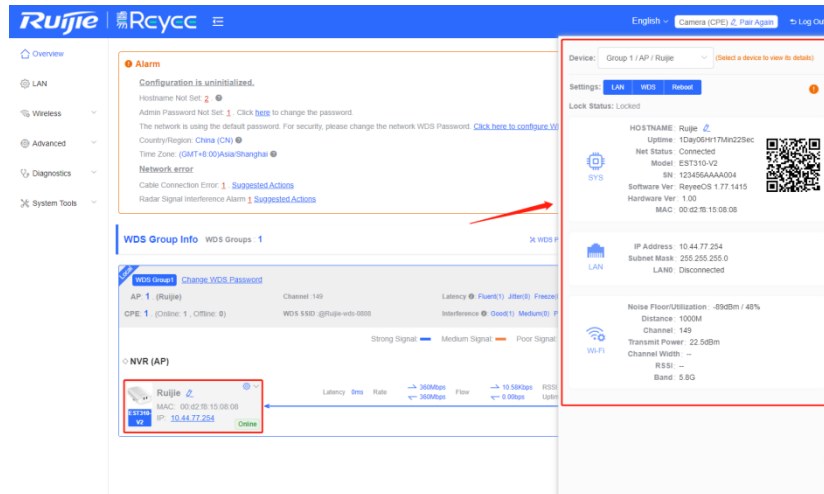

**Note**

The device at the NVR end does not involve channel width and RSSI, and only the device at the camera end does.

# 3 Network Settings

## 3.1 Setting the Address of a LAN Port

The address of a LAN port is used only for login to the web page and does not affect the service network.

### 3.1.1 Allocating IP Addresses to All Bridges in the Network


- Static IP address

On the **Overview** page, click **IP Allocation**.

Configuring static IP addresses for the entire network:

When a large number of devices in the network require static IP addresses, you can use **IP Allocation** to automatically allocate a static IP address for each device. Click **IP Allocation**, set **Internet** to **Static IP Address**, set **Start IP Address**, **Subnet Mask**, **Gateway**, and **DNS Server**, and click **OK**.

Hover the cursor over  to view the help information.

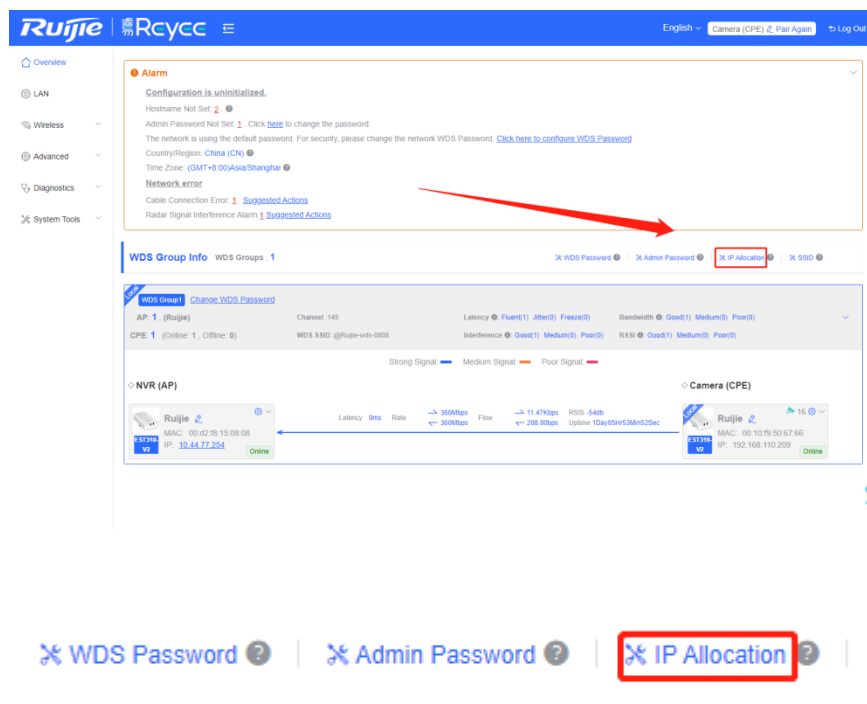

## IP Allocation

ⓘ Assign static IP addresses to conflicting devices.

Internet

\* Start IP Address  ⓘ

\* Subnet Mask  ⓘ

\* Gateway  ⓘ

\* DNS Server

IP Count 253

OK

---

⚠ **Caution**

The start IP address cannot be in the same network segment as the current IP address. Otherwise, the configuration will fail.

After the configuration, the device IP address changes, and the device web page cannot be accessed. You need to enter the new IP address in the browser address bar and ensure that the IP addresses of the management computer and the device are in the same network segment. If they are not in the same network segment, reconfigure the IP address of the management computer. (See [Configuring the IP Address of the Management Computer](#)) Therefore, exercise caution when performing this operation.

---

● Dynamic IP address (DHCP)

When a large number of devices in the network require dynamic IP addresses, you can configure dynamic IP addresses (DHCP) for the entire network so that each device can dynamically obtain an IP address. Set **Internet** to **DHCP**, and click **OK**.

## IP Allocation

ⓘ Assign DHCP-assigned IP addresses to all devices.

Internet


DHCP does not require an account.

OK


---


### 3.1.2 Setting the Address of a LAN Port for a Single Online Bridge

Choose Overview > WDS Group Info > NVR (AP)/Camera (CPE).

To set the IP address for a single device, click , and select LAN from the drop-down list. For the configuration method, see [Allocating IP Addresses to All Bridges in the Network](#).

◇ NVR (AP)

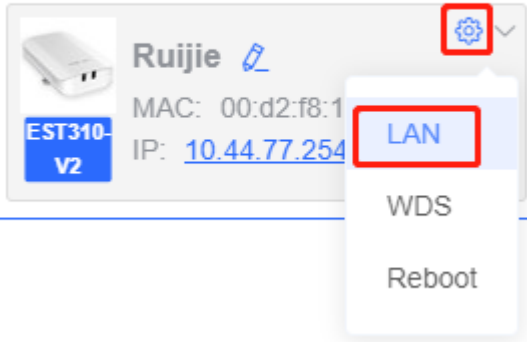

Ruijie 

EST310-V2

MAC: 00:d2:f8:1

IP: 10.44.77.254

LAN

WDS

Reboot

LAN ×

Internet


DHCP does not require an account.

IP Address \*

Subnet Mask 0.0.0.0

Gateway 0.0.0.0

DNS Server 0.0.0.0

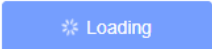

---

#### Caution

After the IP address and subnet mask are changed, the device web page may not be accessed. You need to enter the new IP address in the browser address bar and ensure that the IP addresses of the management computer and the device are in the same network segment. If they are not in the same network segment, reconfigure the IP address of the management computer. (See [Configuring the IP Address of the Management Computer](#)) Therefore, exercise caution when performing this operation.

---

### 3.1.3 Setting the Address of a LAN Port on the Local Device

Open the **LAN** page.

If a DHCP server is deployed in the network, you are advised to set **Internet** to **DHCP**. If no DHCP server is deployed, set **Internet** to **Static IP Address**, set **IP Address**, **Subnet Mask**, **Gateway**, and **DNS Server**, and click **Save**.

**LAN**  
Configure LAN settings.

Internet

DHCP does not require an account.

IP Address 192.168.110.209

Subnet Mask 255.255.255.0

Gateway 192.168.110.1

DNS Server 192.168.110.1

**Save**

---

**Caution**

After the IP address and subnet mask are changed, the device web page may not be accessed. You need to enter the new IP address in the browser address bar and ensure that the IP addresses of the management computer and the device are in the same network segment. If they are not in the same network segment, reconfigure the IP address of the management computer. (See [Configuring the IP Address of the Management Computer](#)) Therefore, exercise caution when performing this operation.

---

## 3.2 Port-Based Flow Control

Choose **Advanced > Flow Control**.

Flow control can relieve the data congestion caused by ports at different speeds and improve the network speed. This function is enabled by default and can be manually disabled.

---





**Flow Control**

Flow control can relieve the data congestion caused by ports at different speeds and improve the network speed.

Flow Control

Save

# 4 PoE Settings

Choose **Advanced > PoE**.

The device supports PoE power supply to cameras (Maximum: 15.4W). You can view the maximum power consumption, current power consumption, remaining power consumption and PoE status. Hover the cursor over

 to display the PoE switch .




---


### PoE Consumption Details

Max Consumption <b>15.4W</b> ⓘ	Current Consumption <b>13.7W</b>	Remaining Consumption <b>1.7W</b>
-----------------------------------	-------------------------------------	--------------------------------------


### PoE Device Panel

 Powered On  Powered Off  PoE Error

Current Consumption: 13.7W  
PoE:   
[Repower](#)

Current Consumption: 13.7W

  
LAN1

---

### Note

PoE is supported on EST100-P only.

---

# 5 Alarm and Fault Diagnosis


## 5.1 Alarm Information and Suggested Action

When bridges fail or lack some necessary security configuration, the system prompts key alarms about the bridges on the homepage, so that users can handle the exceptions promptly.


Choose **Overview > Alarm**.

### 5.1.1 Default Device Name Is Not Modified

Modifying device names can help you better distinguish each bridge. Unless otherwise specified, you are advised to modify default device names.

When viewing the alarm, hover the cursor over the orange number of the prompt and click  in the displayed dialog box to modify the name of each device. (The orange number, 2 in the figure, indicates the number of devices that still use the default name in the network.) Enter the new device name and click **OK** to make the change take effect immediately.

---

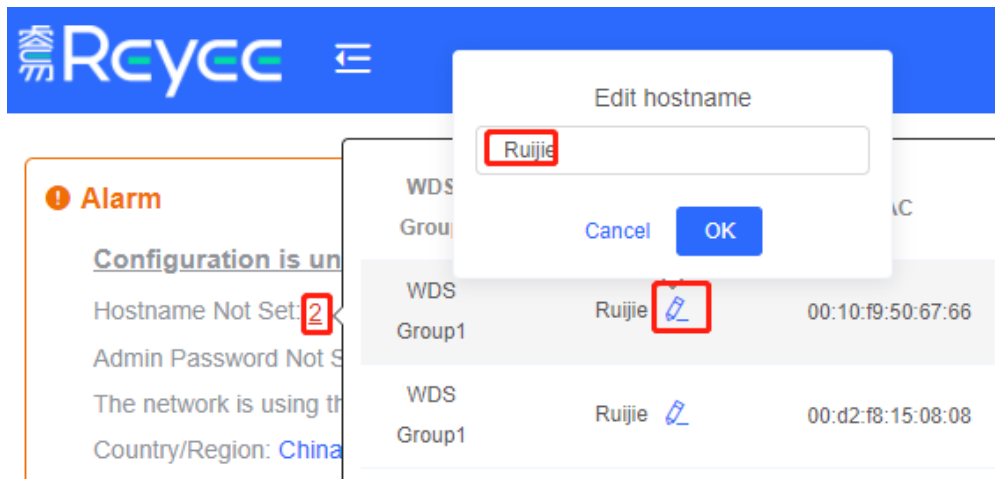

### 5.1.2 Default Admin Password Is Still Used

For device and network security, you are advised to configure the admin password for the network to prevent login of unauthorized users.

Click the prompt to configure the admin password for the network. Hover the cursor over the orange number (1 in the figure) of the prompt to configure the device password. For configuration steps, refer to [Default Device Name Is Not Modified](#).

#### Alarm

##### Configuration is uninitialized.

Hostname Not Set: 2

Admin Password Not Set: 1. Click [here](#) to change the password.

The network is using the default password. For security, please change the network password.

Country/Region: [China \(CN\)](#)

Time Zone: [\(GMT+8:00\)Asia/Shanghai](#)

##### Network error

Cable Connection Error: 1. [Suggested Actions](#)

Radar Signal Interference Alarm 1 [Suggested Actions](#)

#### Caution

The admin password is used to log in to the web page of any device in the network. Therefore, remember the admin password. If you forget the admin password, restore factory settings. For the method, see [Logging in to the Web Page](#).

If there is an unbridged device in the network, the function of configuring the admin password will be disabled.

### 5.1.3 Default WDS Password Is Still Used by All Devices

The default WDS password of devices of the same model is the same. Changing the WDS password can prevent others from illegally accessing the network by using a device of the same model.

Click **Click here to configure WDS Password**, enter the new password, and click **Save** to change the WDS password for the entire network.

#### Alarm

**Configuration is uninitialized.**

Hostname Not Set: **2** . 

Admin Password Not Set: **1** . Click [here](#) to change the password.

The network is using the default password. For security, please change the network WDS Password. [Click here to configure WDS Password](#)

#### Caution

When configuring the WDS password for the entire network, ensure that all devices are online. Otherwise, WDS passwords of the devices will be inconsistent.

Configuring the WDS password for the entire network will reconnect all devices in the network. Therefore, exercise caution when performing this operation.

If there is an unbridged device in the network, the function of configuring the WDS password for the entire network will be disabled.

### 5.1.4 Network Cable Is Disconnected or Incorrectly Connected

Hover the cursor over the orange number of the prompt to display the alarm details.

Click the suggested action to check the solution.

#### **Network error**

Cable Connection Error: **1** . [Suggested Actions](#)

Please check cable connection and then re-plug or replace the cable.

### 5.1.5 Latency Is High or Bandwidth Is Insufficient


First, check whether the device latency is too high. If yes, the interference in the environment may be severe. Then, you are advised to change to a channel with smaller interference.

If not, increase the channel width. For channel settings, see [Channel settings](#). For channel width settings, see [Optimizing the Channel Width](#).

To check whether the latency is too high, perform as follows:


Hover the cursor over the orange number of the prompt to display all WDS groups, and click a group to display the details.

On the **Overview** page, check whether **Latency** is **Freeze**. If so, the latency is too high. Otherwise, the latency is normal.

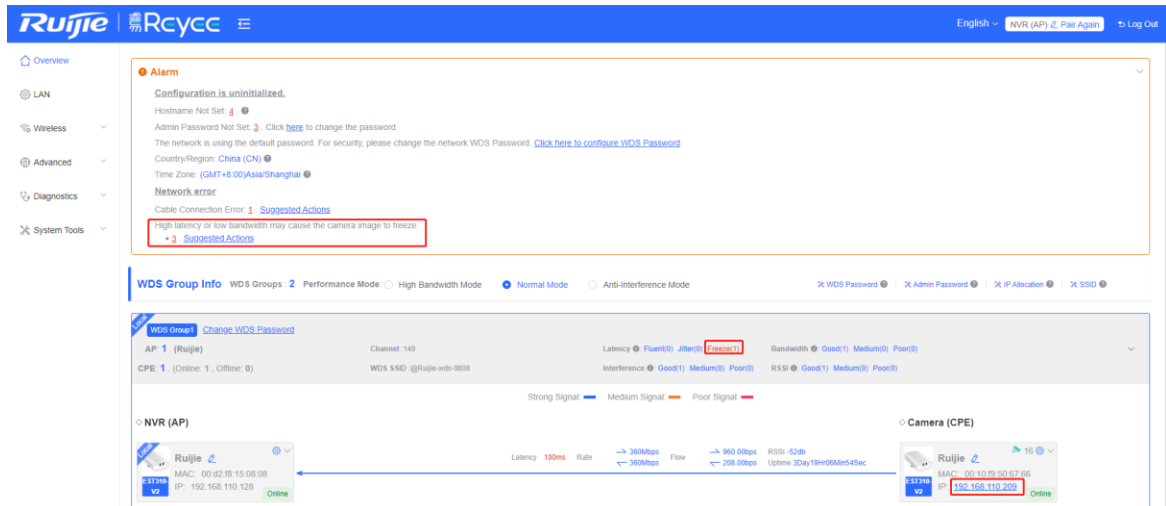

High latency or low bandwidth may cause the camera image to freeze.

- 3. [Suggested Actions](#)

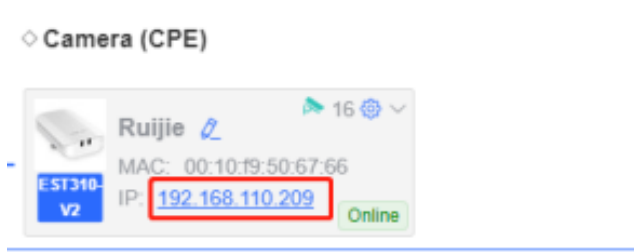

### ⚠ Caution

Channel and channel width settings described in this section are performed on the local device. You can click the IP address of a device to open the management page of the device and set the channel and channel width.

## 5.1.6 Radar Signal Interference

When the device detects a radar signal in a channel, it generates an alarm and automatically switches the channel. Hover the cursor over the orange number of the prompt to display alarm details.

### Network error

Cable Connection Error: 1. [Suggested Actions](#)

Radar Signal Interference Alarm 1. [Suggested Actions](#) It is recommended to select a non-DFS channel (36-48/149-165) to maintain the WDS connection.

**Network error**  
 Cable Connection Error: 2 - [Suggest](#)  
 Radar Signal Interference Alarm 1 [S](#)

WDS Group	Hostname	Backoff Channel	Backoff Time	SN
WDS Group2	Ruijie <a href="#">E</a>	60	2022-02-21 14:57:26	CANL63300035S

According to the information about the WDS group and back-off channel in the alarm record, check whether the current working channel in the WDS group (group 2 in the example) is consistent with the back-off channel. (See [Displaying WDS Group Information](#).) If so, manually switch the channel to a non-dynamic frequency selection (DFS) channel. For the setting method, see [Channel settings](#).

**Note**

Non-DFS channels include 36-48 and 149-165.

Detecting radar signal interference is supported on EST310v1, EST310v2, EST350v1 and EST350v2 only.

## 5.2 Network Diagnosis Tools

### 5.2.1 Network Test Tool

Choose **Diagnostics > Network Tools**.

When you select the ping tool, you can enter the IP address or URL and click **Start** to test the connectivity between the bridge and the IP address or URL. The message "Ping failed" indicates that the bridge cannot reach the IP address or URL.

The Traceroute tool displays the network path to a specific IP address or URL.

The DNS Lookup tool displays the DNS server address used to resolve a URL.

**Network Tools**

Tool  Ping  Traceroute  DNS Lookup

\* IP Address/Domain

\* Ping Count


\* Packet Size

Result

## 5.2.2 Collecting Fault Info

Choose **Diagnostics**> **Fault Collection**.


Click **Start** to collect fault information and compress it into a file for engineers to identify fault.

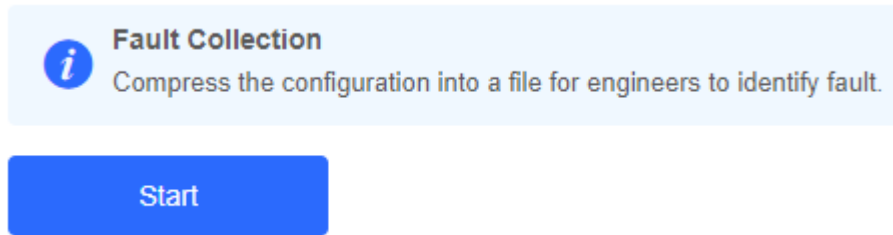

# 6 System Settings


## 6.1 Configuring Management Password

Choose **Admin Password**.

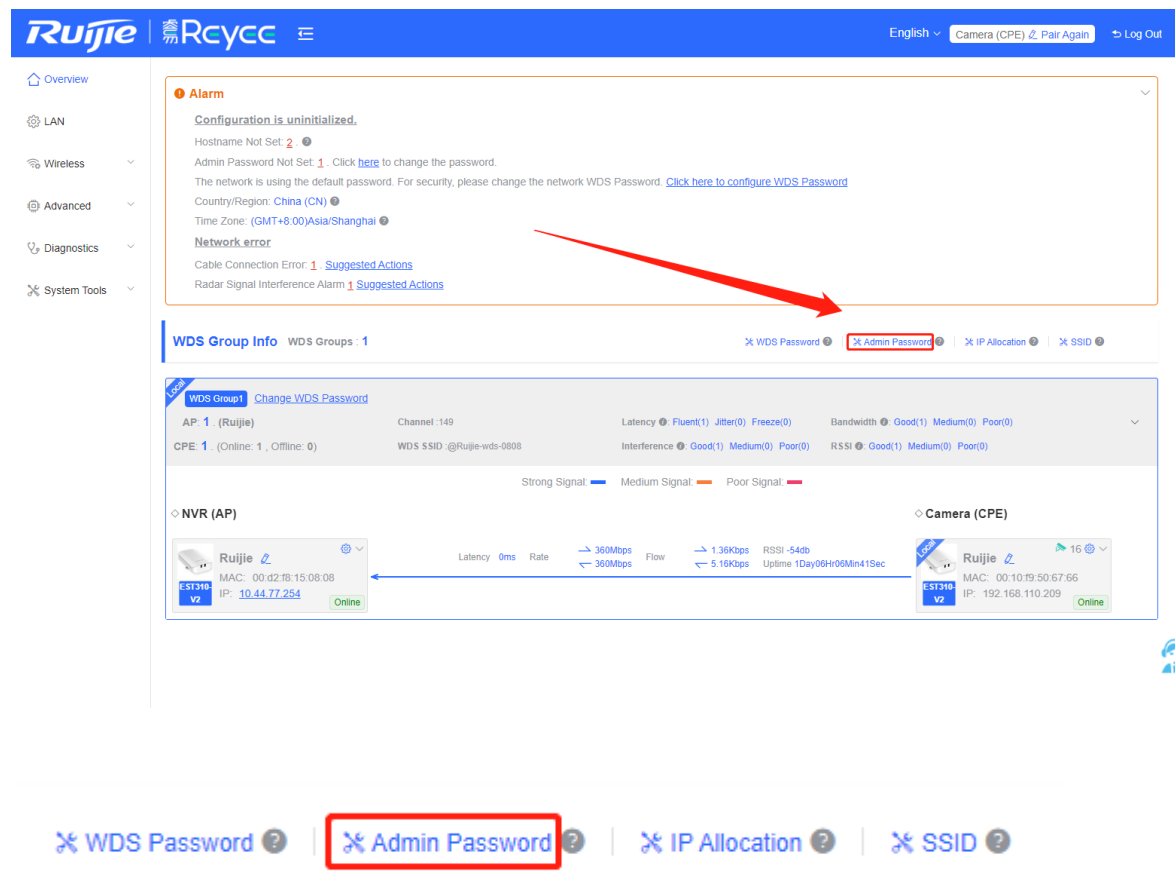

Click **Admin Password** to change the login password for all devices.

If there is an unbridged device in the network, the link will be unavailable.

Hover the cursor over  to view the help information.

## Password



\* Password

\* Confirm Password

Save

### Caution

This password is used to log in to Eweb system of any device in the network.

If there is an unbridged network in the network, the function of configuring the admin password will be disabled.

## 6.2 Configuring Session Timeout Duration

Choose **System Tools** > **Management** > **Session Timeout**.

If no operation is performed on the page within a period of time, the session will be down. When you need to perform operations again, enter the password to open the configuration page. The default timeout duration is 3600 seconds, that is, 1 hour.

Backup & Import

Reset

Session Timeout



### Session Timeout

\* Session Timeout

Sec


Save

## 6.3 Resetting Factory Settings

Choose **System Tools** > **Management** > **Reset**



Click **Reset** to restore factory settings.

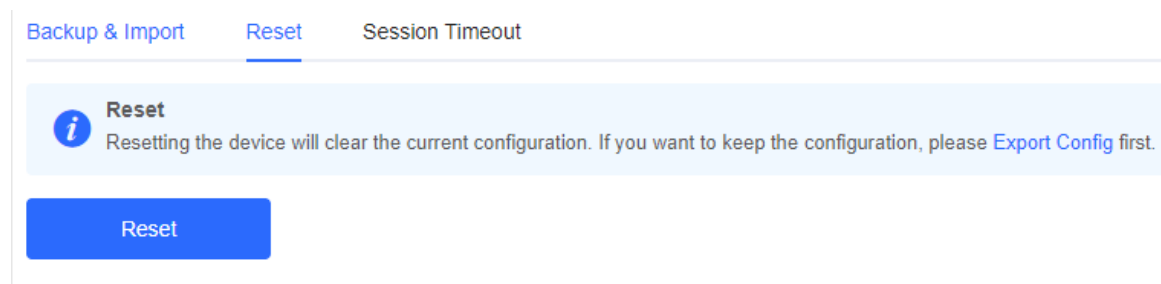

---

 **Caution**


This operation will clear existing settings and restart the device. Therefore, exercise caution when performing this operation. If there is any configuration in the current system, please export the configuration before resetting the device.

---


## 6.4 Rebooting the Device

Choose **System Tools > Reboot > Reboot**

Click **Reboot** to reboot the device immediately.

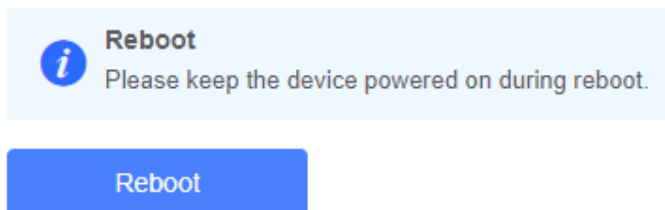

---

 **Caution**

Please keep the device powered on during reboot. Otherwise, the device may be damaged.

---

## 6.5 Rebooting the Camera

### 6.5.1 Rebooting All Cameras

Choose **Advanced > Restart Camera**.

You can reboot all cameras by check **All Cameras** and then clicking **Restart Camera**.

---

### Restart Camera

**i** If you uncheck All Cameras, only the camera powered by DC/PoE power source via the current device will be restarted. If you check All Cameras, all cameras powered by DC/PoE power source via all devices in the network will be restarted.

All Cameras

Restart Camera

---


**⚠ Caution**

Only the cameras connected to the online devices supporting this function will be restarted.  
Please keep the device powered on during reboot. Otherwise, the device may be damaged.


---

## 6.5.2 Rebooting a Specific Camera

Choose **Overview > WDS Group Info > NVR (AP)/Camera (CPE)**.

You can restart a specific camera by clicking  and selecting **Restart Camera**.

### ◇ Camera (CPE)

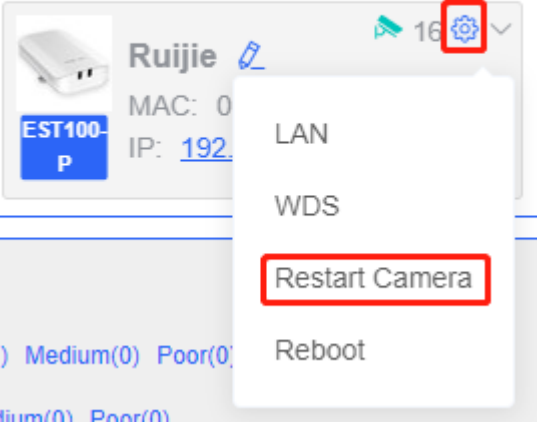

The screenshot shows a camera configuration card for a Ruijie device. The card includes a camera icon, the name 'Ruijie', and fields for MAC address (0) and IP address (192). A gear icon in the top right corner of the card is highlighted with a red box. A dropdown menu is open from this gear icon, showing four options: 'LAN', 'WDS', 'Restart Camera' (which is highlighted with a red box), and 'Reboot'.


## 6.5.3 Rebooting the Camera Connected to the Current Device

Choose **Advanced > Restart Camera**.

Uncheck **All Cameras** and click **Restart Camera**.

---

**Restart Camera**

 If you uncheck All Cameras, only the camera powered by DC/PoE power source via the current device will be restarted. If you check All Cameras, all cameras powered by DC/PoE power source via all devices in the network will be restarted.

 All Cameras[Restart Camera](#)**Note**

Only EST100-P and EST100-D support camera restart.

## 6.6 Configuring System Time

Choose **System Tools > Time**.

You can view the current system time. If the time is incorrect, check and select the local time zone. If the time zone is correct but time is still incorrect, click **Edit** to manually set the time. In addition, the bridge supports Network Time Protocol (NTP) servers. By default, multiple servers serve as the backup of each other. You can add or delete local servers as required.

**Time**

Configure and view time (The device has no RTC module. The time settings will not be saved upon reboot).

Current Time 2022-02-18 22:14:28

[Edit](#)

\* Time Zone (GMT+8:00)Asia/Shanghai

\* NTP Server 0.cn.pool.ntp.org [Add](#)

1.cn.pool.ntp.org [Delete](#)

cn.pool.ntp.org [Delete](#)

pool.ntp.org [Delete](#)

asia.pool.ntp.org [Delete](#)

europa.pool.ntp.org [Delete](#)

ntp1.aliyun.com [Delete](#)

[Save](#)

## 6.7 Configuring Config Backup and Import

Choose **System Tools > Management > Backup & Import**


Configure backup: Click **Backup** to download a configuration file locally.

Configure import: Click **Browse**, select a configuration file backup on the local PC, and click **Import** to import the configuration file. The device will restart.

[Backup & Import](#)    [Reset](#)    [Session Timeout](#)

---

**Backup & Import**

 If the target version is much later than the current version, some configuration may be missing. It is recommended to choose [Reset](#) before importing the configuration. The device will be rebooted automatically later.

**Backup Config**

Backup Config    [Backup](#)

**Import Config**

File Path        [Browse](#)    [Import](#)

## 6.8 Performing Update and Displaying the System Version

### 6.8.1 Online Update

Choose **System Tools > Update > Online Update**.

If there a new version available, you can click it for an update.

#### Caution

 
After being updated, the device will reboot. Therefore, exercise caution when performing this operation.

If no version update is detected or online update cannot be performed, check whether the bridge is connected to the Internet.

[Online Update](#)    [Local Update](#)    [Update All Devices](#)

---

**Online Update**

 Online update will keep the current configuration. Please do not refresh the page or close the browser. You will be redirected to the login page automatically after update.

Current Version    ReyeeOS 1.77.1415

### 6.8.2 Local Update

Choose System Tools > **Update > Online Update**.

You can view the current software version, hardware version and device model. If you want to update the device with the configuration retained, check **Keep Config**. Click **Browse**, select an update package on the local PC, and click **Upload** to upload the file. The device will be updated.

Online Update   Local Update   Update All Devices

### Local Update

Please do not refresh the page or close the browser.

Model EST310-V2

Version ReyeeOS 1.77.1415 1.00

Development  (It is recommended to be disabled after use.)

Mode

Keep Config  (If the target version is much later than the current version, it is recommended not to keep the configuration.)

Update File

Select

Browse

Upload

---

### Caution

After being updated, the device will reboot. Therefore, exercise caution when performing this operation.

---

## 6.8.3 Update All Devices

Choose **System Tools** > **Update** > **Update All Devices**.

You can view the current software version, hardware version and device model. You are advised to update all devices with configuration data retained.

Click **Browse**, select an update package on the local PC, and click **Upload** to upload the file. In the pop-up page, click **Details** to check the target update package and devices. Click **Update** to start updating all devices.

Online Update   Local Update   Update All Devices

### Update All Devices

Update all devices in the network. Please do not refresh the page or close the browser.

Model EST310-V2

Version ReyeeOS 1.77.1415 1.00

Keep Config  (Uneditable)

Update File

Select

Browse

Upload

---

---


**⚠ Caution**

After being updated, all devices in the network will reboot, which may take a long time. Therefore, exercise caution when performing this operation.


After the update is complete, please log in to Eweb to check the software version number (see [Displaying the Information About a Single Device](#)). If update fails, please choose **Local Update** or **Update All Devices** to perform update again.

---

## 6.9 Switching System Language

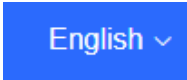Click  in the upper right corner of the page.

Select the target language from the drop-down list.

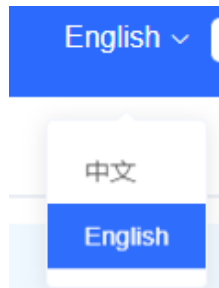

---

**i Note**

Only Chinese and English are available.

---